theben

309 352 01

SIMPLEXA 601 601 0 901 SIMPLEXA 602 602 0 901

Installation and operating instructions Time switch

1. Basic safety instructions



⚠ WARNING

Danger of death through electric shock or fire!

- ➤ Installation should only be carried out by professional electrician.
- The device is designed for installation on DIN top hat rails (in accordance with EN 60715)
- Corresponds to type 1 BSTU in accordance with IEC/EN 60730-2-7


Designated use


- The time switch is used for lighting, ventilation, flushing etc. applications
- Only for use in closed, dry rooms.
- Do not use on safety devices, e.g. escape route doors, fire safety equipment etc.

Disposal

Dispose of device in environmentally sound manner

2. Screen and keys

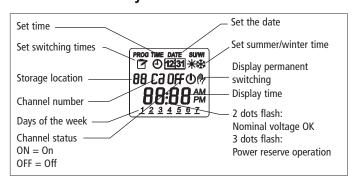



RESET/complete deletion

> Press reset button.

 \bigwedge

All data is deleted after a reset and the device is returned to factory settings (not preset).


3. Connection/installation


⚠ WARNING




Warning, danger of death through electric shock!

- > Disconnect power source.
- ➤ Cover or shield any adjacent live components.
- > Ensure device cannot be switched on!
- > Check power supply is disconnected.
- > Earth and bypass.

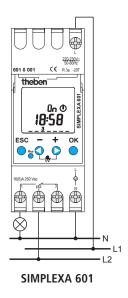

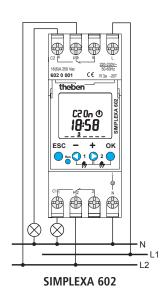

4. Overview of menu selection

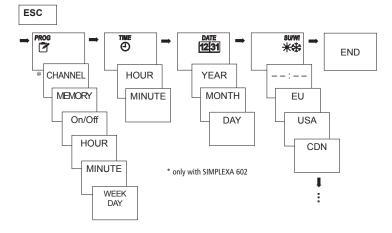

5. Initial start-up

The device is not preset. Date, day of the week (1 ... 7), time format (12h AM/PM or 24 h) and time must be set.

Press any button and follow on-screen instructions. (see fig.).




Select digit for day of the week: Presetting e.g.

Monday = 1; depending on country: Sunday = 1, Saturday = 1

6. Switching times



6.1 Set switching times

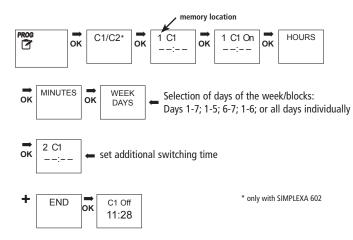

There are 28 available memory locations per channel.

6.2 Request switching times

Request switching times by using + or - buttons.

6.3 Change /delete switching times

Change switching times:

- > Confirm stored switching time by pressing the **OK** button.
- Press OK button again once, use + or button to change hour/minute.
- > Confirm with **OK** button.

Delete switching time:

- > Confirm stored switching time by pressing the **OK** button.
- ➤ Press + or button; it appears




> Confirm with **OK** button.

7. Summer/winter time



7.1 Set summer/winter time

- Press ESC button and using the + or buttons select SU/WI menu.
- Press OK button and using the + or buttons select the relevant rule (see table).

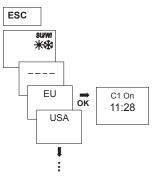

Summer/winter time rules		
	no rule	
EU	rule for the EU	
USA	USA	
CDN	Canada	
IL	Israel	
NZ	New Zealand	
IRAN	Iran	
FREE	free rule	
DATE	fixed date	

7.2 Set free rule (FREE)

1. Change to summer time

> Enter month, week in month (5 = last week), day of the week, changeover time consecutively

2. Change to winter time

> Enter month, week in month

8. Set manual permanent switching

The permanent switching (PERMANENT ON, PERMANENT OFF) can be selected for each channel via direct operation of buttons.

> SIMPLEXA 601: Press + and – buttons simultaneously (pappears)

SIMPLEXA 602: for C1: Press + and - buttons for C2: Press + and OK buttons

Press button continually until the required status is displayed (PERMANENT ON, PERMANENT OFF, no permanent switching).

9. Technical data

· Pollution degree:

Nominal voltage:	device: 230 V 220–230 V~	device: 110 V 110–120 V~
 Frequency: Power consumption: Contact: Contact material: Switching capacity: Power reserve: Accuracy: 	+10 %/-15 % 50-60 Hz typically 4,5 VA floating AgSnO₂ 16 (6) A, 250 V~ 3 years at 20 °C ≤ ±1 s/day at 20 °C	+10 %/-15 % 50–60 Hz typically 3,0 VA floating AgSnO ₂ 16 (6) A, 250 V~ 3 years at 20 °C ≤ ±1 s/day at 20 °C
Incandescent lamp load:Halogen lamp load:Fluorescent lamp	1400 W 1400 W	700 W 700 W
uncorrected: series-corrected: parallel-corrected: Compact fluorescent tubes:	1400 VA 1400 VA 220 VA (24μF) 13 x 7 W, 13 x 11 W,	700 VA 700 VA 110 VA (24μF) 6 x 7 W, 6 x 11 W,
Permissible ambient-	10 x 15 W, 8 x 23 W	5 x 15 W, 4 x 23 W
temperature: • Protection class:	−20 °C +55 °C −20 °C +55 °C II in accordance with EN 60730-1 with designated installation	
• Protection rating:	IP 20 in accordance with EN 60529	

 Theben AG
 Service

 Hohenbergstr. 32
 Fon +49 (0) 74 74/6 92-369

 72401 Haigerloch
 Fax +49 (0) 74 74/6 92-207

 DEUTSCHLAND
 hotline@theben.de

 Fon +49 (0) 74 74/6 92-0
 Adresses, telephone numbers etc. at www.theben.de

2