

SUPPLIER DECLARATION OF CONFORMITY (SDoC)

SDoC identification Number:

Major Tech MT720 400A AC TRMS VFD Clamp Meter SDOC

Issuer details

Name (of New Zealand manufacturer or importer):

Marshire Investments (NZ) Limited t/a Hamer

Telephone: 0800 239 239

New Zealand Company No. (if applicable): 96793

Email Address: sales@hamer.co.nz

Contact Address:

27 Dalziel Place
Woolston
Christchurch 8023
New Zealand

Details

Major Tech Product:

MT720 - 400A AC TRMS VFD Clamp Meter CAT III 600V / CAT II 1000V

Warnings:

Read, understand, and follow all instructions, cautions and warnings attached to and/or packed with all test and measurement devices before each use

Before each use, verify meter operation by measuring a known voltage or current

Never use the meter on a circuit with voltages that exceed the category based rating of this meter

Always adhere to local and national safety codes. Use personal protective equipment to prevent shock and arc blast injury where hazardous live conductors are exposed

Usage of this meter in any way other than that specified by the manufacturer can impair safe operation, resulting in severe injury or death

HAMER Ltd confirms on inspection that the above article is not unsafe to use in NZ and the above article meets the safety requirements and principles of AS/NZ3000 and should be used in accordance within the manufacturer's instructions.

Declaration

Signed for and on behalf of:

Marshire Investments (NZ) Ltd t/a Hamer

Name and position as authorized by the issuer:

Evan Taylor
National Brand Manager

Issuer Identification (as affixed to the article)



DATE: 11th December 2020

SUPPLIER DECLARATION OF CONFORMITY (SDoC)



MT720

400A AC Clamp Meter True RMS



Technical Datasheet



MT720

The MT720 True RMS 4000 count clamp meter provides fast sampling time with high accuracy. The meter offers peak hold, 100ms Inrush current, low pass filter for accurate measurements of VFD signals with a convenient non-contact voltage function.

Features

- Measures AC Current up to 400A
- Measures AC/DC Voltage up to 1000V
- Resistance 40MΩ
- Temperature measurement to 1000°C
- Inrush Current
- 30 mm Clamp Jaw Opening
- VFD (Variable Frequency Drive)
- Non-Contact Voltage
- Data Hold & Peak Hold Function
- Diode Check & Continuity Buzzer
- Backlight & Flashlight
- CAT III 600V / CAT II 1000V

TRUERMS



Specifications

FUNCTION	RANGE
AC Current	400A
DC Voltage	1000V
AC TRMS Voltage	1000V
Resistance	40MΩ
Temperature	-20 to 1000°C
Capacitance	99.99mF
Frequency (AC Voltage)	10Hz - 100kHz
Frequency (AC Current)	45Hz - 1kHz
Duty Cycle	20 - 80%
Diode Test	1.5mA Typical
NCV Detection	Above 80V AC
Batteries	3 x 1.5V AAA Batteries
Jaw Size	30mm
Dimensions	220 x 80 x 39mm
Weight	305g



Meter Includes flash light to light up area of test



Red Light Indicates detection of Non Contact Voltage (NCV)



4000 Count Backlight LCD Display



Rear entry of standard 4mm Test Lead Terminals



30mm Conductor size



Inrush Current, Peak Hold & VFD Measurement

Code	Description
MT720	Major Tech 400A AC TRMS VFD Clamp Meter



INSTRUCTION MANUAL

MT720"

AC TRMS CLAMP METER



Contents

Page no

1. Safety	4
1.1. International Safety Symbols	4
1.2. SAFETY NOTES	4
1.3. WARNINGS	4
1.4. CAUTIONS	4
2. Input Limits	5
3. Meter Description	5
4. Symbols Used on LCD Display	6
5. Specifications	7
6. General Specifications	9
7. Operation	10
7.1. AC Current Measurement	10
7.2. AC Voltage Measurement	11
7.3. DC Voltage Measurement	11
7.4. Resistance	11
7.5. Capacitance Measurements	11
7.6. Frequency Measurements	12
7.7. Temperature Measurements	12
7.8. Diode Test	12
7.9. Continuity Measurements	13
7.10. Non-Contact AC Voltage Measurements	13
7.11. MODE/VFD	13
7.12. HOLD/Flashlight	13
7.13. RANGE	14
7.14. PEAK/INRUSH	14
7.15. Relative/Backlight	14
7.16. Automatic Power OFF	14
8. Maintenance	15
9. Cleaning and Storage	15
10. Battery Replacement	15
11. Temperature Probe Replacement	15

SUPPLIER DECLARATION OF CONFORMITY (SDoC)

1. Safety

1.1. International Safety Symbols



This symbol, adjacent to another symbol or terminal, indicates the user must refer to the manual for further information.



This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present.



Double insulation.



Application around and removal from uninsulated hazardous live conductors is permitted.

1.2. SAFETY NOTES

- Do not exceed the maximum allowable input range of any function.
- Do not apply voltage to meter when resistance function is selected.
- Set the function switch OFF when the meter is not in use.
- Remove the battery if meter is to be stored for longer than 60 days.

1.3. WARNINGS

- Set function switch to the appropriate position before measuring.
- When measuring volts do not switch to current resistance modes.
- Do not measure current on a circuit whose voltage exceeds 600V.
- When changing ranges always disconnect the test leads from the circuit under test.

1.4. CAUTIONS

- Improper use of this meter can cause damage, shock, injury or death. Read and understand this user manual before operating the meter.
- Always remove the test leads before replacing the battery or fuses.
- Inspect the condition of the test leads and the meter itself for any damage before operating the meter. Repair or replace if damaged before use.
- Use great care when making measurements if the voltages are greater than 25VAC RMS or 35VDC. These voltages are considered a shock hazard.
- Always discharge capacitors and remove power from the device under test before performing Diode, Resistance or Continuity tests.
- Voltage checks on electrical outlets can be difficult and misleading because of the uncertainty of connection to the recessed electrical contacts. Other means should be used to ensure that the terminals are not "live".
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

4. Symbols Used on LCD Display

HOLD	Data Hold
Minus sign	Negative reading display
0 to 3999	Measurement display digits
REL	REL/DCA Zero
MAX/MIN	Maximum/Minimum
⏻	Auto Power Off
AUTO	Auto Range mode
⎓	Direct/ Voltage
~	Alternating Current Voltage
🔋	Low battery
mV or V	Milli-volts or Volts (Voltage)
Ohms	(Resistance)
A	Amperes (Current)
F	Farad (Capacitance)
Hz/%	Hertz (Frequency)/Percent (duty ratio)
°F and °C	Fahrenheit and Celsius units (Temperature)
n, μ, m, M, k	Unit of measure prefixes: nano, milli, micro, mega, and kilo
→)	Continuity test
→ 	Diode test




2. Input Limits

Function	Maximum Input
A AC	400A
V AC/DC	1000V DC/AC
Resistance, Capacitance, Frequency, Diode Test, Temperature	300V DC/AC

3. Meter Description

- NCV Test
- Current clamp
- Non-contact AC voltage indicator light
- Clamp trigger
- REL button
- LCD display
- RANGE button
- COM input jack
- Data Hold and Backlight button
- Rotary Function switch
- MODE select and Flashlight button
- INRUSH and PEAK button
- V Ω Diode Continuity CAP TEMP Hz% jack
- Battery Cover

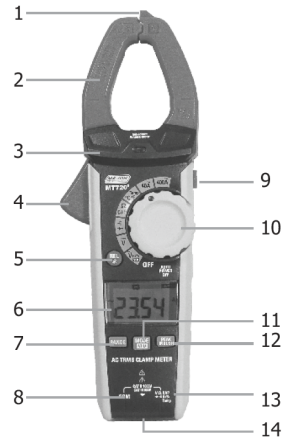

5. Specifications

Function	Range	Resolution	Accuracy ±(% of reading+digits)
AC True RMS Current	40.00A	10mA	±(2.0% + 8 digits)
	400.0A	100mA	±(2.5% + 8 digits)

Over range protection: Maximum input 400A.
Accuracy specified from 5% to 100% of the measuring range.
Frequency Response: 50Hz to 60Hz True RMS.
Inrush current Maximum Input: 400A Inrush current Sensitivity: >2A.

Function	Range	Resolution	Accuracy ±(% of reading+digits)
DC Voltage	4.000V	1mV	±(1.0% + 3 digits)
	40.00V	10mV	±(1.0% + 3 digits)
	400.0V	100mV	±(1.0% + 3 digits)
	1000V	1V	±(1.2% + 3 digits)

Maximum input: 1000V DC

Function	Range	Resolution	Accuracy ±(% of reading+digits)
AC True RMS Voltage (with VFD)	4.000V	1mV	±(1.2% + 5 digits)
	40.00V	10mV	±(1.2% + 5 digits)
	400.0V	100mV	±(1.2% + 5 digits)
	1000V	1V	±(1.5% + 5 digits)

Variable frequency Drive TEST AC voltage range: 100V–600V.
AC voltage bandwidth: 50 to 1000Hz (sine) 50/60 (all wave)
Accuracy specified from 5% to 100% of the measuring range
Maximum Input: 1000V AC RMS.
PEAK Maximum Input: 1000V

Function	Range	Resolution	Accuracy ±(% of reading+digits)
Resistance	400.0Ω	0.1Ω	±(1% + 4 digits)
	4.000kΩ	1Ω	±(1.5% + 2 digits)
	40.00kΩ	10Ω	±(1.5% + 2 digits)
	400.0kΩ	100Ω	±(1.5% + 2 digits)
	4.000MΩ	1kΩ	±(2.0% + 5 digits)
	40.00MΩ	10kΩ	±(3.0% + 8 digits)

Input Protection: 300V DC or 300V AC RMS

SUPPLIER DECLARATION OF CONFORMITY (SDoC)

Function	Range	Resolution	Accuracy \pm (% of reading+digits)
Capacitance (Auto-ranging)	99.99nF*	0.01nF	\pm (4.5% + 20 digits)
	999.9nF	0.1nF	
	9.999 μ F	0.001 μ F	
	99.99 μ F	0.01 μ F	\pm (3.0% + 5 digits)
	999.9 μ F	0.1 μ F	
	9.999mF	0.001mF	
	99.99mF	0.01mF	\pm (5% + 5 digits)

Input Protection: 300V DC or 300V AC RMS.

* < 99.99nF (no specification)

Frequency with test leads (AC Voltage)

Function	Range	Accuracy \pm (% of reading+digits)
Frequency (Auto-ranging)	10Hz to 100kHz	\pm (1.0% + 5 digits)

Input Protection: 1000V AC RMS

Sensitivity: > 15V AC RMS

Frequency (AC Current)

Function	Range	Accuracy \pm (% of reading+digits)
Frequency (Auto-ranging)	45Hz to 1kHz	\pm (1.0% + 5 digits)

Sensitivity: > 20A

Function	Range	Resolution	Accuracy \pm (% of reading+digits)
Duty Cycle	20.0% to 80.0%	0.1	\pm (1.2% + 10 digits)

Function	Range	Resolution	Accuracy \pm (% of reading+digits)
Temperature (Type-K)	-20.0 to 1000°C	0.1/1°C	\pm (3% + 3°C)
	-4.0 to 1832°F	0.1/1°F	\pm (3% + 5°F)

Sensor: Type K Thermocouple

Input Protection: 300V DC or 300V AC RMS.

Function	Testing Condition	Reading
Diode	Forward DCA is approx .1mA, open circuit voltage MAX 3V	Forward voltage drop of Diode
Continuity	Test current MAX 1.5mA	Buzzer makes a long sound, While resistance is less than (50 Ω)

Input Protection: 300V DC or 300V AC RMS.

8

7. Operation

NOTES: Read and understand all Warning and Caution statements in this operation manual prior to using this meter. Set the function select switch to the OFF position when the meter is not in use.

7.1. AC Current Measurements

WARNING: Ensure that the test leads are disconnected from the meter before making current clamp measurements.

- Set the Function switch to the **400A** range. If the approx. range of the measurement is not known, select the highest range then move to the lower ranges if necessary.
- Press the **REL** button to zero the meter display.
- Use Rotary Function switch to select AC 40A 400A range.
- Select AC current Test, press the INRUSH key to turn Inrush current test, the LCD will display "-----".
- Press the trigger to open jaw. Fully enclose only one conductor. For optimum results, center the conductor in the jaw.
- The clamp meter LCD will display the reading.




INCORRECT



CORRECT

10

6. General Specifications

Clamp jaw opening	30mm approx.
Display	3-3/4 digits (4000 counts) backlit LCD
Low Battery indication	'  ' is displayed
Over-range indication	'OL' display
Measurement rate	3 readings per second, nominal
Temperature sensor	Type K thermocouple
Input Impedance	10M (VDC and VAC)
AC response	True RMS (AAC and VAC)
ACV Bandwidth	2KHZ
Operating Temperature	5°C to 40°C (41°F to 104°F)
Storage Temperature	-20°C to 60°C (-4°F to 140°F)
Operating Humidity	Max 80% up to 31°C decreasing linearly to 50% at 40°C
Storage Humidity	<80%
Operating Altitude	2000 meters maximum.
Battery	Three (3) x 1.5V AAA Battery
Battery life	~30h (backlight ON), ~100h (backlight OFF)
Auto power OFF	After approx. 15 minutes
Dimensions	220 x 80 x 39mm
Weight	305g
Safety	For indoor use and in accordance with the requirements for double insulation to IEC1010-1 (2001): EN61010-2-030 EN61010-2-032 EN61010-2-033 Overvoltage Category III 600V, Pollution Degree 2.

9

7.2. AC Voltage Measurement

- Insert the black test lead into the negative **COM** terminal and the red test lead into the positive **V→CAP·TEMP·Hz%Ω** terminal.
- Set the function switch to the **V~** position.
- Press the MODE/FD key for 1 second to turn on the VFD test.
- Press the PEAK key to turn on Peak test.
- Connect the test leads in parallel to the circuit under test.
- Read the voltage measurement on the LCD display.

7.3. DC Voltage Measurement

- Insert the black test lead into the negative **COM** terminal and the red test lead into the positive **V→CAP·TEMP·Hz%Ω** terminal.
- Set the function switch to the **V~** position.
- Connect the test leads in parallel to the circuit under test.
- Read the voltage measurement on the LCD display.

7.4. Resistance

- Insert the black test lead into the negative **COM** terminal and the red test lead into the **V→CAP·TEMP·Hz%Ω** positive terminal.
- Set the function switch to the **Ω→→** position.
- Touch the test probe tips across the circuit or component under test.
- Read the resistance on the LCD display.

7.5. Capacitance Measurements

WARNING: To avoid electric shock, discharge the capacitor under test before measuring.

- Set the function switch to the **CAP** position.
- Insert the black test lead banana plug into the negative **COM** jack and the red test lead banana plug into the **V→CAP·TEMP·Hz%Ω** positive jack.
- Touch the test probe tips across the part under test. If "OL" appears in the display, remove and discharge the component.
- Read the capacitance value in the display.
- The display will indicate the proper decimal point and value.

Note: For very large values of capacitance measurement it can take several minutes before the final reading stabilizes.

11

7.6. Frequency Measurements

1. Insert the black test lead banana plug into the negative **COM** jack and the red test lead banana plug into the **V- \rightarrow Hz% Ω CAP TEMP Hz% Ω** positive jack.
2. Set the function switch to the **V-Hz/%** Position.
3. Press **MODE** button to select the Frequency (Hz) or Duty cycle (%).
4. Touch the test probe tips across the part under test.
5. Read the value on the display.
6. The display will indicate the proper decimal point and value.

7.7. Temperature Measurements

1. Set the function switch to the **TEMP** position.
2. Insert the Temperature Probe into the negative **COM** and the **V- \rightarrow Hz% Ω CAP TEMP Hz% Ω** positive jacks, observing polarity.
3. Touch the Temperature Probe head to the device under test. Continue to touch the part under test with the probe until the reading stabilizes.
4. Read the temperature on the display. The digital reading will indicate the proper decimal point and value.
5. Use the **MODE** button to select °F or °C.
WARNING: To avoid electric shock, be sure the thermocouple probe has been removed before changing to another measurement function.

7.8. Diode Test

1. Insert the black test lead banana plug into the negative **COM** jack and the red test lead banana plug into the **V- \rightarrow Hz% Ω CAP TEMP Hz% Ω** positive jack
2. Turn the function switch to **Ω \rightarrow Hz% Ω** position. Use the **MODE** button to select the diode function if necessary (diode symbol will appear on the LCD when in Diode test mode)
3. Touch the test probe tips to the diode or semiconductor junction under test. Note the meter reading
4. Reverse the test lead polarity by reversing the red and black leads. Note this reading
5. The diode or junction can be evaluated as follows:
 - If one reading displays a value (typically 0.400V to 0.900V) and the other reading displays **OL**, the diode is good.
 - If both readings display **OL** the device is open.
 - If both readings are very small or '0', the device is shorted.

7.13. RANGE

Press the **RANGE** key to activate the manual mode and to disable the Autorange function. The symbol "AUTO" disappears from the upper left part of the display. In manual mode, press the **RANGE** key to change measuring range: the relevant decimal point will change its position. The **RANGE** key is not active in positions **\rightarrow Hz, \rightarrow Hz%, CAP, Hz%, Temp °C °F**. In Autorange mode, the instrument selects the most appropriate ratio for carrying out measurement. If a reading is higher than the maximum measurable value, the indication "**OL**" appears on the display. Press and hold the **RANGE** key for more than 1 second to exit the manual mode and restore the Autorange mode.

7.14. PEAK/INRUSH

1. In AC voltage test mode, Press **PEAK/INRUSH** key, the peak maximum and peak minimum values can be measured.
2. In current test mode, Press **INRUSH** key the inrush current values are measured.

7.15. Relative/ Backlight

1. Press the **REL** button to zero the display. "**REL**" will appear in the display. The displayed reading is now the actual value less the stored "zero" value.
2. Press the **REL** button to view the stored value. "**REL**" will flash in the display.
3. To exit this mode, press and Hold the REL button until "**REL**" is no longer in the display.
4. Press and hold the **REL/Backlight** button to turn the Backlight on. Press and hold again to turn the Backlight off.

7.16. Automatic Power OFF

1. In order to conserve battery life, the meter will automatically turn off after approximately 15 minutes. To turn the meter on again, turn the function switch to the OFF position and then to the desired function position.
2. Press and hold the **MODE/VFD** key to turn the system on, the auto power off function will be cancelled.

7.9. Continuity Measurements

1. Insert the black test lead into the negative COM terminal and the red test lead into the **V- \rightarrow Hz% Ω CAP TEMP Hz% Ω** positive terminal.
2. Set the function switch to the **Ω \rightarrow Hz% Ω** position.
3. Use the MODE button to select continuity " **\rightarrow Hz% Ω** ". The display icons will change when the MODE button is pressed.
4. Touch the test probe tips across the circuit or component under test.
5. If the resistance is < 50 Ω , a tone will sound.

7.10. Non-Contact AC Voltage Measurements

WARNING: Risk of Electrocution. Before use, always test the Voltage Detector on a known live circuit to verify proper operation

1. Touch the probe tip to the live conductor or insert into the live side of the electrical outlet.
2. If AC voltage is present, the detector light will illuminate.
NOTE: The conductors in electrical cord sets are often twisted. For best results, rub the probe tip along a length of the cord to assure placing the tip in close proximity to the live conductor.
NOTE: The detector is designed with high sensitivity. Static electricity or other sources of energy may randomly trip the sensor. This is normal operation.

7.11. MODE/VFD (Variable Frequency Drive)

1. Press **MODE/ VFD** key to select the double measurement functions. This key is active in **V- \rightarrow Hz% Ω CAP Ω \rightarrow Hz% Ω** position to select among resistance test, diode test, continuity test, Hz%, and in Temp position to select between °F or °C.
2. Press and hold the **MODE/VFD** key and turn the selector switch to turn the system on, the auto power off function will be cancelled.
3. Press and hold the MODE/VFD key for 2 seconds to switch to VFD.

7.12. HOLD/Flashlight

1. To freeze the LCD reading, press the **Hold/Flashlight** button. While data hold is active, the **HOLD** icon appears on the LCD. Press the button again to return to normal operation.
2. The LCD is equipped with backlighting for easier viewing, especially in dimly lit areas.
3. Press the **Hold/Flashlight** button to turn the Flashlight on. Press again to turn the Flashlight off.

8. Maintenance

WARNING: To avoid electrical shock, disconnect the meter from any circuit, remove the test leads from the input terminals, and turn OFF the meter before opening the case. Do not operate the meter with an open case.

9. Cleaning and Storage

1. Periodically wipe the case with a damp cloth and mild detergent; do not use abrasives or solvents. If the meter is not to be used for 60 days or more, remove the battery and store it separately.

10. Battery Replacement

1. Rotate battery door lock 180 degrees to open the battery door
2. Open the battery compartment
3. Replace the 3 x 1.5V AAA battery
4. Secure the battery compartment

11. Temperature Probe Replacement

1. The replacement bead wire probe (with K-Type plug) is part number MT660.
2. The replacement temperature adaptor (with banana plug) is part number MT802.



MAJOR TECH (PTY) LTD

T9 Industrial Village, 7 Sam Green Road,
Tunney Ext. 9, Elandsfontein,
South Africa
P.O. Box 888, Isando 1600,
South Africa

Telephone: +27 11 872 5500
National Contact Number: 08 61 62 5678
E-mail: sales@major-tech.com



www.major-tech.com

